



Brackets for Petzl Ecrin Roc Helmet


Petzl Bracket Kit includes:

- right and left brackets, 2 nylon nuts,
- 2 nylon bolts, 4 nylon washers

Tools needed for installation:

- flat head screwdriver
- 7/16 in. wrench

Identify right and left brackets. The pictures below show installation of the right bracket. Follow the pictures below, and tighten with 7/16 in. wrench and flathead screwdriver. Once the brackets are set, attach face shield to helmet muffs as described with that product's instructions. When you have the muff/shield assembled, install into brackets as shown to the right. Muffs may be folded out of the way and visor lifted when not in use as shown.

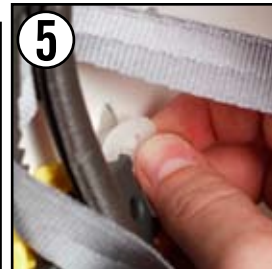

Pressure Clips: These are included with the Peltor replacement muffs. If you've purchased the complete muff, visor and bracket set, then you'll find the pressure clips inside the muffs' box. These are provided so that the muffs can be attached to the brackets more securely. The two clips come attached to one plastic tab. Break them off of the tab. Attach a pressure clip to the inside of each muff's clip as shown left. Now the muffs can be inserted into the brackets.

