





Storage

Keep microinjection units dry and cool.
(above freezing but under 100°F)

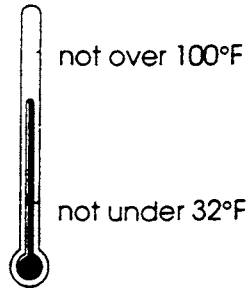


Tools

Cordless power drill, sharp 1/164-inch bit,
and plastic-faced hammer or rubber mallet

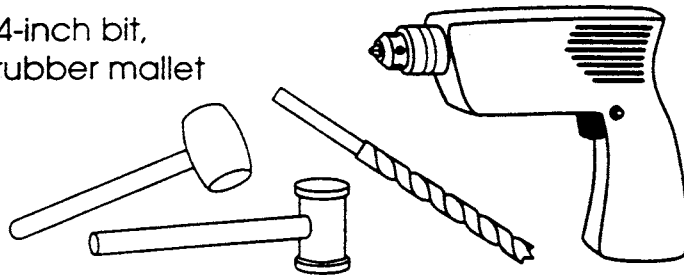

Clothing

When handling, installing, or removing
microinjection units,
wear safety glasses,
protective clothing,
and chemical-resistant gloves.

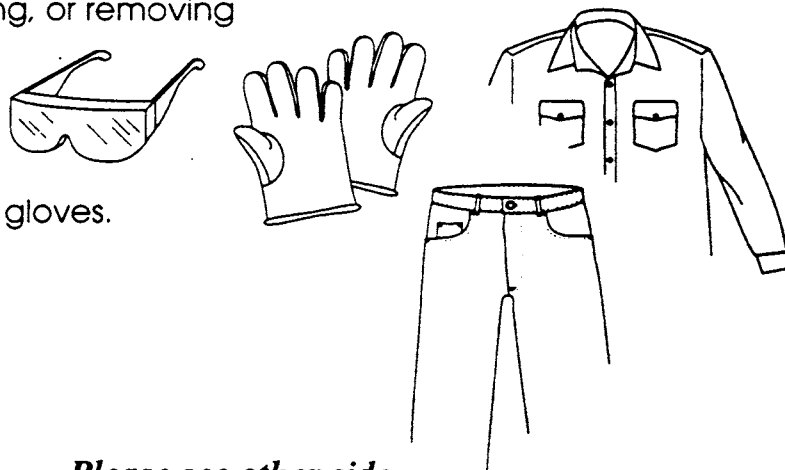

*Please see other side
for installation instructions*

Buyer and/or user are notified that this product is sold only for professional commercial use by personnel properly trained and supervised by the buyer and that this product is not for personal or home use. A Material Safety Data Sheet is available for this product and is to be followed prior to use.

Tree Tech™
microinjection systems

a Division of Florida Silvics, Inc.


Available at
Sherrill Arborist Supply
800-525-8873 sherrillinc.com

INS 1/96

How to Install

Tree Tech microinjection units


1 Drill hole at proper location.

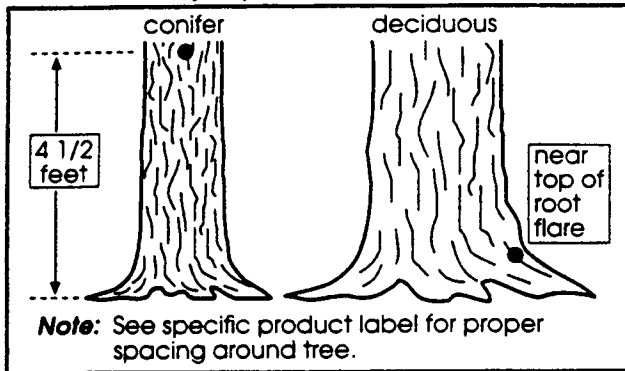

5 Seat microinjection unit.


First, hold the solid PVC installation cap over the end of the microinjection unit.

Then, gently but firmly tap the cap until the microinjection unit is snugly seated against the bark and the internal seal is broken (shown below).

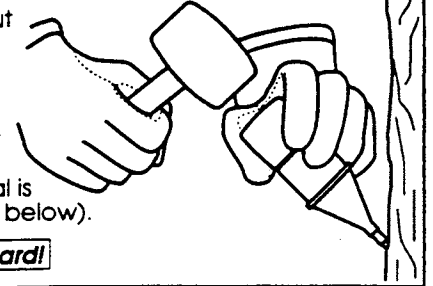


Do not strike hard!


2 Drill hole to proper depth.

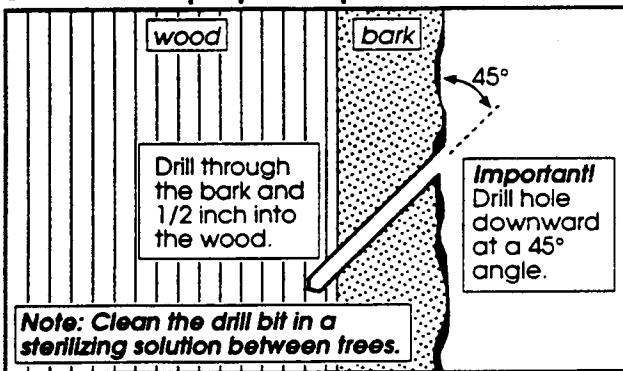


6 Before seating After seating

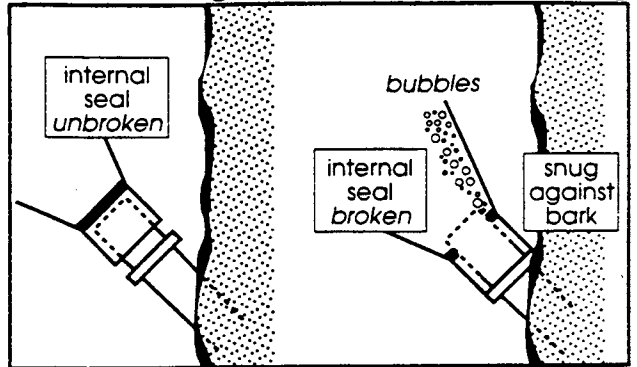

3 Insert microinjection unit.

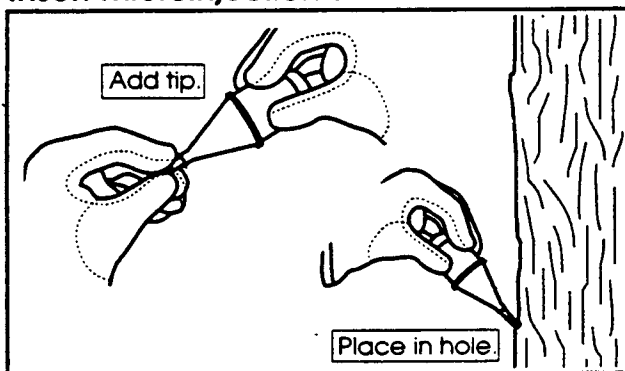

7 Pressurize microinjection unit.

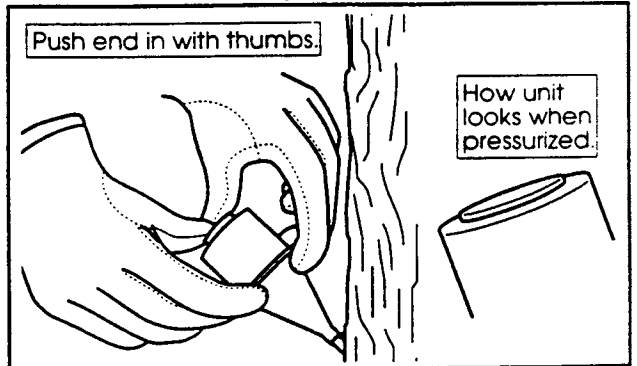

4 Do not strike microinjection unit directly!

WARNING!

You must place the solid PVC installation cap over the microinjection unit before seating it!



8 Remove empty microinjection unit.

Remove when empty, but not more than 72 hours after installation.

Twist and withdraw carefully and avoid spilling residual solution.

If tip stays in tree, remove it with pliers.

Follow packaging instructions to discard used microinjection units.

